

EXPERIMENT NO: 05

Use Autopsy to create a case and import evidence

DATE:

1. AIM:

To use the Autopsy digital forensics platform to create a new forensic case, import digital evidence (disk image files), configure ingest modules, and perform basic forensic analysis and reporting.

2. DESCRIPTION:

Autopsy is a premier open-source digital forensics platform and graphical interface to The Sleuth Kit® and other digital forensics tools. It is widely used by law enforcement, military, and corporate examiners to analyze and extract critical data from digital devices.

In a standard forensic investigation, raw data or disk images (such as .E01, .dd, or .raw formats) are imported into a securely managed "Case". Autopsy utilizes various **Ingest Modules** (like File Type Identification, Keyword Searching, Timeline Analysis, and Hash Lookups) to process this evidence in the background, automatically categorizing artifacts such as web history, file system metadata, and communication records for the examiner to review.

3. PROCEDURE:

Step 1: Installation & Preparation

1. Download and install the Autopsy application based on the host operating system.
2. Download the required evidence files (4Dell Latitude CPi.E01) to a secure local directory.
3. Launch the Autopsy application to view the welcome screen.

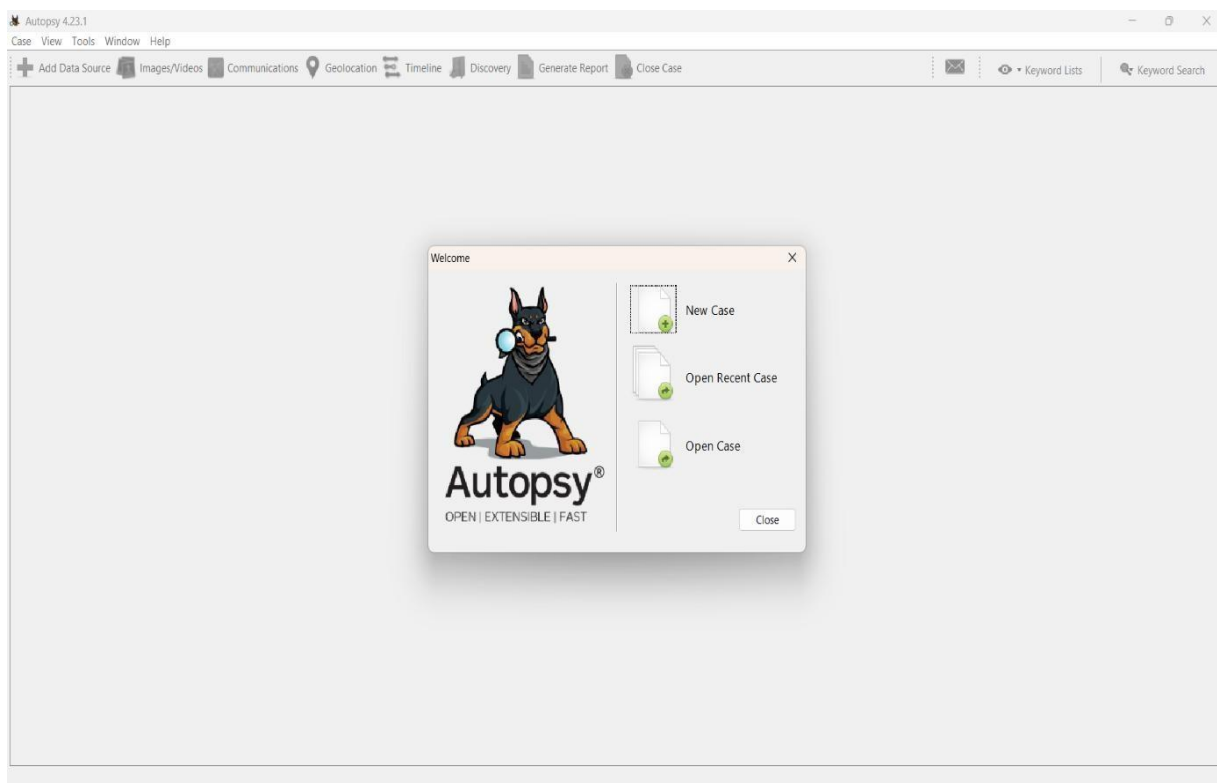


Figure 1: Autopsy startup menu and tool interface

Step 2: Starting a New Case

1. Click on **New Case** from the startup menu.
2. Enter the case name 3 and specify the base directory where the case data will be stored.
3. Click **Next** to proceed to the optional information.

4. Fill in the required case details, including the case number and examiner's name, then click **Finish**.

The screenshot shows the 'New Case Information' dialog box with the 'Case Information' step selected. The 'Steps' list on the left shows '1. Case Information' and '2. Optional Information'. The 'Case Information' section contains the following fields and options:

- Case Name:** A text box containing 'sadiq_investigation'.
- Base Directory:** A text box containing 'F:\New folder\' with a 'Browse' button to its right.
- Case Type:** Two radio buttons: 'Single-User' (selected) and 'Multi-User'.
- Case data will be stored in the following directory:** A text box containing 'F:\New folder\sadiq_investigation'.

At the bottom of the dialog, there are five buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'. The 'Next >' button is highlighted.

Figure 2: Creating a new forensic case and setting the base directory

The screenshot shows the 'New Case Information' dialog box with the 'Optional Information' step selected. The 'Steps' list on the left shows '1. Case Information' and '2. Optional Information'. The 'Optional Information' section contains the following fields and options:

- Case:** A text box containing 'Number: 99240040210'.
- Examiner:** A group box containing four text boxes: 'Name: Sadiq', 'Phone: xxxxxxxxxx', 'Email: SadiqXXXXXXX@gmail.com', and 'Notes: exp5'.
- Organization:** A group box containing a text box 'Organization analysis is being done for:' followed by a dropdown menu showing 'Not Specified' and a 'Manage Organizations' button.

At the bottom of the dialog, there are five buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'. The 'Finish' button is highlighted.

Figure 3: Entering Optional Information including Examiner details

Step 3: Adding a Data Source

1. When prompted to add a data source, choose the type of data source (e.g., Disk Image or VM file).
2. Browse to the local directory and select the downloaded evidence file (4Dell Latitude CPi.E01).
3. **Configure Ingest Modules:** Select the specific analysis modules required for the investigation.
4. Click **Next** to start the analysis.

The screenshot shows the 'Add Data Source' window. On the left, a 'Steps' list includes: 1. Select Host, 2. Select Data Source Type, 3. **Select Data Source**, 4. Configure Ingest, and 5. Add Data Source. The main area is titled 'Select Data Source'. It features a 'Path:' label above a text box containing 'C:\Users\sadiq\Downloads\4Dell Latitude CPi.E01' and a 'Browse' button. Below this is an unchecked checkbox labeled 'Ignore orphan files in FAT file systems'. Further down are two dropdown menus: 'Time zone:' set to '(GMT+5:30) Asia/Calcutta' and 'Sector size:' set to 'Auto Detect'. There are three optional text input fields: 'Bitlocker Password (optional):', 'Hash Values (optional):' (with sub-fields for MD5, SHA-1, and SHA-256), and a note at the bottom stating 'NOTE: These values will not be validated when the data source is added.' At the bottom of the window are five buttons: '< Back', 'Next >', 'Finish', 'Cancel', and 'Help'.

5.

Figure 4: Importing the .E01 evidence file data source

Step 4: Initial Analysis and Overview

1. Monitor the **Ingest Progress** in the lower-left corner of the interface as Autopsy processes the data source.
2. Once processing yields results, use the **Tree Viewer** on the left pane to explore different categorized aspects like File System, Deleted Files, Data Artifacts, etc.

Step 6: Reporting and Case Closure

1. Click on **Generate Report** from the main toolbar.
2. Choose the desired report format (e.g., Excel Report, HTML Report) under the Select and Configure Report Modules window.
3. Click **Next** and select the specific result types to include (e.g., Accounts, E-Mail Messages, etc.).
4. Review the generated report to ensure all relevant information and exported artifacts are accurately documented.
5. Once the investigation is complete, close the case within Autopsy and archive all data according to organizational policies.

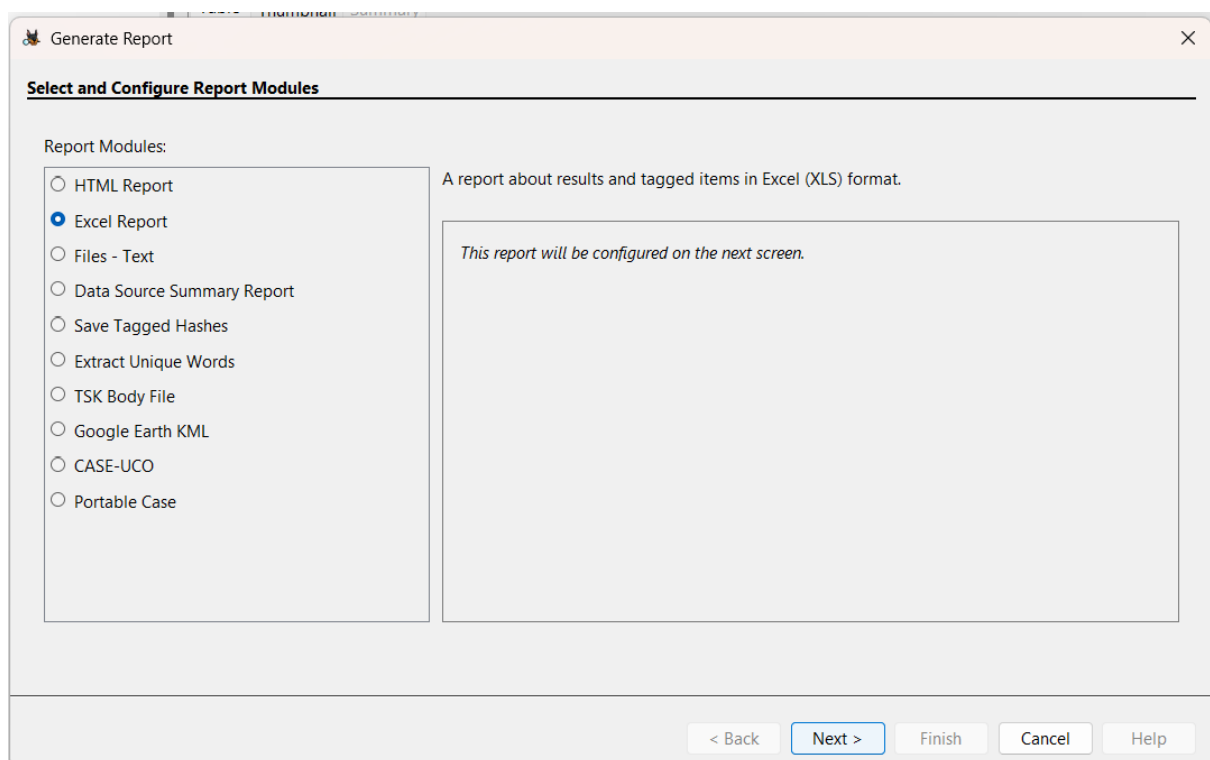


Figure 7: Selecting the report module format

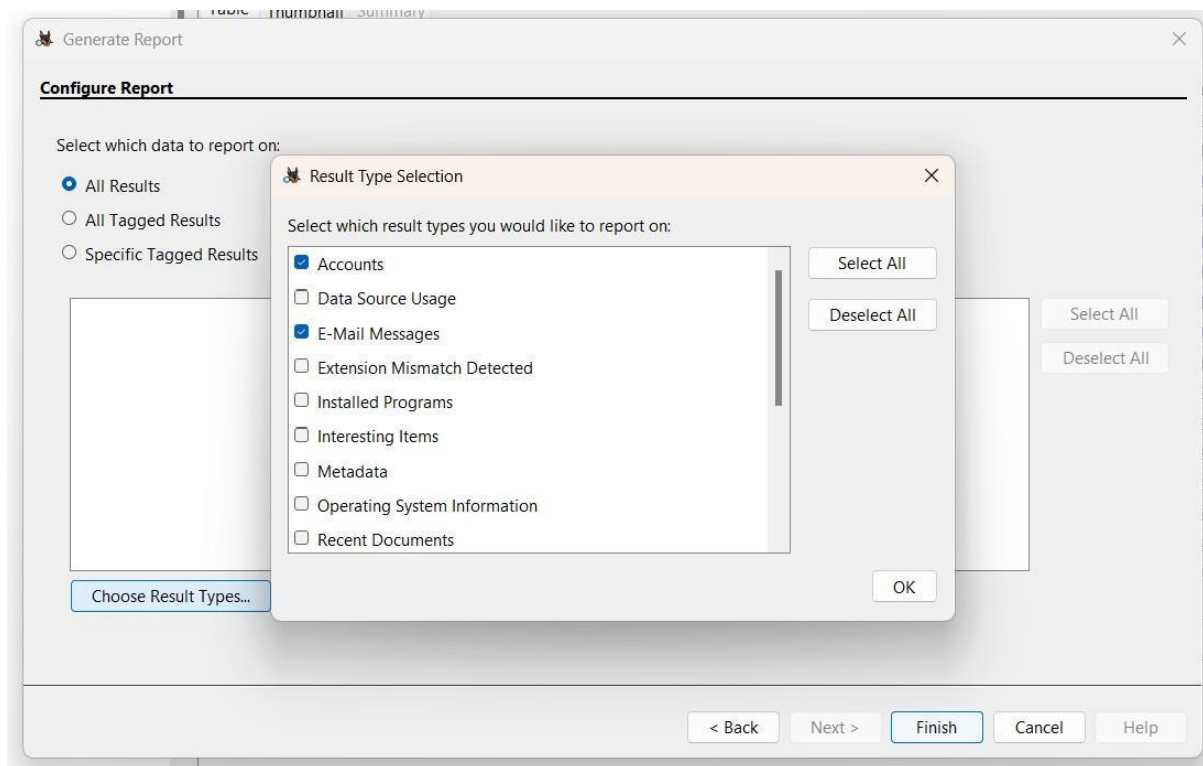


Figure 8: Configuring the report by selecting specific tagged data

4. RUBRICS

Criteria & Marks Assigned	Mark Allotted	Mark Awarded
1. GitHub Activity & Submission Regularity	3	
2. Application of Forensic Tools & Practical Execution	3	
3. Documentation & Reporting	2	
4. Engagement, Problem-Solving & Team Collaboration	2	
Total	10	

5. RESULT

The digital forensics experiment was successfully completed. A new case was established in Autopsy, and the provided .E01 disk image evidence was successfully imported, analyzed using ingest modules, and documented via the reporting feature.